




CF SOLDER FEED STATION

CF / SOLDER FEED STATION






INSTALLATION

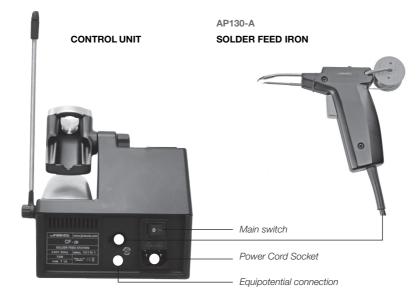

PART NAMES




ADJUSTABLE STAND

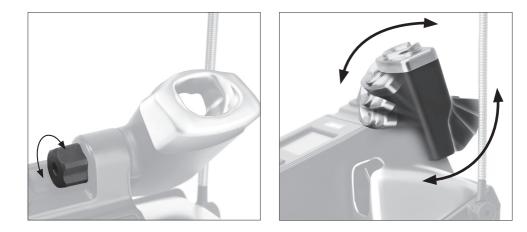

CABLE COLLECTOR



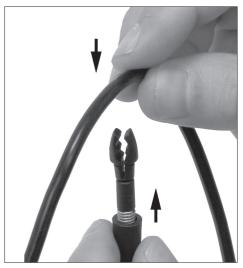



CLEANNING OPTIONS

Full set of clean option: sponge, metal wool and brush

S0331 Sponge



S0354 Sponge




The smoothest cleaning method. The sponge has to be kept wet (not soaked) using distilled water.

CL6205 Inox Wool



Provides a deeper cleaning on the tip.

TAPPING

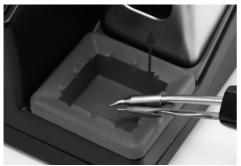


Tap smoothly the cartridge on the wiper profile to remove the excess of solder

CL6220 Brushes



More agressive on the tip than the wool.

WIPING

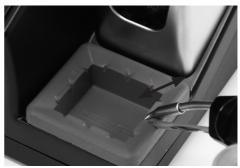

Use the slots to wipe any posible particle sticked on the tip


HEAT MANAGEMENT

JBC stations intelligently manage the tool temperature and it helps to extended the tip life:

Work mode: Lift tool from the stand and the tool tip heats up to the selected temperature.

Sleep mode: When the tool is in the stand, the temperature reduces (preset sleep temperature is 180°C / 360°F).


Hibernation mode: After longer periods of inactivity (pre-set to 30 minutes), the power is cut off and the tool cools down to room temperature.

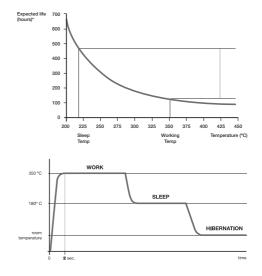

Heat management increase tip life which reduces cost of ownership.



CONTROL SCREEN

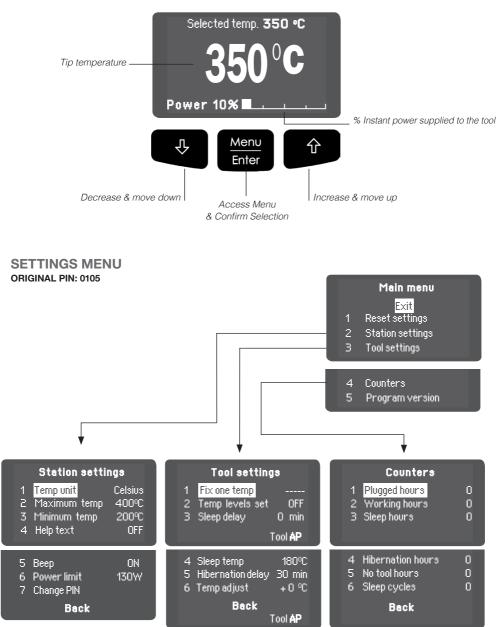

TECHNICAL SPECIFICATIONS

- Temperature selection from 90 to 450°C (±5%).
- Output Peak Power: 130W.
- Safety transformer, mains separator and double isolation.
- CF-2B 230V 50/60Hz. Input fuse: 1A. Output: 23.5V
- CF-1B 120V 50/60Hz. Input fuse: 2A. Output: 23.5V
- CF-9B 100V 50/60Hz. Input fuse: 2A. Output: 23.5V
- Total weight of unit: 2,8 Kg. (6.2 lb)
- Complies with CE standards on electrical safety, electromagnetic compatibility and ESD protected housing "skin effect".
- RoHS compliant.
- Equipotential connector and the tool tip are connected to station mains ground supply for ESD protection.



This product should not be thrown in the garbage.



WARRANTY

JBC's 2 years warranty guarantees this equipment against all manufacturing defects, covering the replacement of defective parts and all necessary labour.

Warranty does not cover product wear due to use or mis-use.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased enclosing this fully filled in, sheet.

SERIAL N°

STAMP OF DEALER

DATE OF PURCHASE

www.jbctools.com