USER MANUAL

Modułowo

MOD - 05

USB to UART Converter With 500mA

Protection, FT232RL



Store: Tutorials: Documentation and schematics:

Software and projects:

Blog:

store.modulowo.com academy.modulowo.com products.modulowo.com app.modulowo.com blog.modulowo.com Modułowo sp. z o.o. ul. Mokotowska 1, 00-640 Warsaw, POLAND E-mail: info@modulowo.com SER MANUAL





This converter enables easily connection of the constructed project with UART output to the computer via USB port. When connected to the computer a virtual COM port is created.

The built-in 500mA Polymer Fuse, along with additional elements, protects the USB port the circuit is connected to. It is possible to install

a USB connector or a USB socket. Additional DTR, CTS and RTS signal leads are available as well.

Specifications:

Code and Product Name	MOD-05 USB to UART Converter With 500mA Protection, FT232RL
Integrated Circuit	FT232RL
Protection	Polymer Fuse 500mA
Input Connector	USB connector or a USB socket (USB connector is mounted)
Output Pins	7 – pin, +V, GND, TxD, RxD, DTR, CTS, RTS
Power	+5V from USB Port
Output Voltage	+3.3V or +5V (+5V is standard configuration)
LED Indication	yes
Dimensions	36 mm x 21 mm
Configuration	Output Voltage Selection SMD Jumper
Additional Information	It is possible to install a USB port or a socket


Your list of modules

Each module has a unique serial number. Go to www.modulowo.com/list, enter the serial number and add the module to your list. This will allow quick access to the documentation and software.

Modulowo assumes no liability or responsibility for any errors or inaccuracies that may appear in this document. Modulowo may make changes to specifications and product descriptions at any time, without notice. Copyright © 2015 Modulowo. All rights reserved.



Schematic:

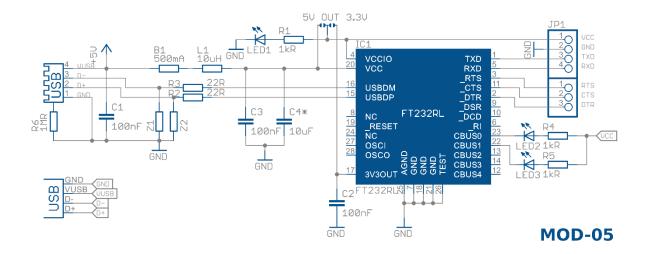

Pinouts:



MOD-05