

## TE-B CHANGING THE HEATING ELEMENT

### FOLLOW THIS PROCESS INVERTED TO RE-CONNECT THE HEATING ELEMENT

This step has to be performed when the tool is stopped and the heating set is cold.

1. Untighten screw.
2. Separate the heating element from the heating set's handle.
3. Connect the new heating element, pushing it's extreme.
4. Insert screw to avoid air-loss which could reduce the heating element's lifetime.

